



Instruction Manual


2700 • 2701 • 2710

Worm Drive Saws

Getting the most out of your tool.

Please take time to read this manual and pay particular attention to the safety rules we've provided for your protection. Don't forget to send in your owner's registration card. If you have any questions about your tool please call:

1-800-9-BD TOOL
(1-800-923-8665)

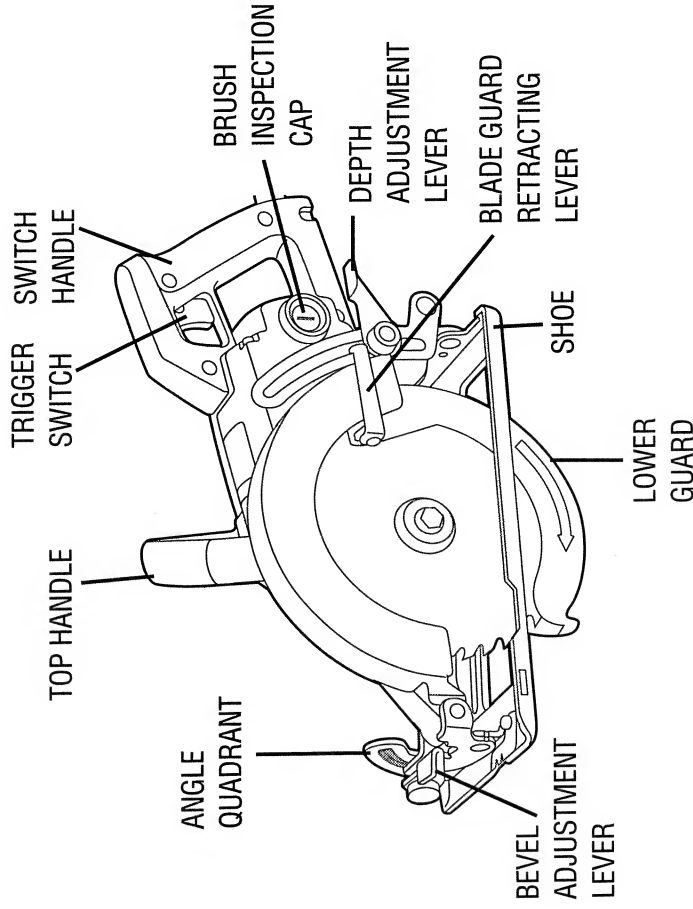

- 2700** 7 1/4" Worm Drive Circular Saw
- 2701** 7 1/4" Worm Drive Circular Saw with Twist Lock Plug
- 2710** 8 1/4" Worm Drive Circular Saw


FOR YOUR SAFETY - ALL TOOLS

WARNING: When using electric tools, basic safety precautions should always be followed to reduce risk of fire, electric shock, and personal injury, including the following:

READ ALL INSTRUCTIONS

Grounding Instructions

This tool should be grounded while in use to protect the operator from electric shock. The tool is equipped with a 3-conductor cord and 3-prong grounding type plug to fit the proper grounding type receptacle. The green (or green and yellow) conductor in the cord is the grounding wire. Never connect the green (or green and yellow) wire to a live terminal. If your unit is intended for use on less than 150 V, it has a plug that looks like that shown in sketch A. If it is for use on 150 to 250 V, it has a plug that looks like that shown in sketch D. An adapter, sketches B and C, is available for connecting sketch A type plugs to 2-prong receptacles. The green-colored rigid ear, lug, or the like, extending from the adapter must be connected to a permanent ground, such as a properly grounded outlet box. No adapter is available for a plug as shown in sketch D. ADAPTER SHOWN IN FIGURES B and C IS NOT FOR USE IN CANADA. Use only 3-wire extension cords that have 3-prong grounding-type plugs and 3-pole receptacles that accept the tool's plug. Replace or repair damaged cords.

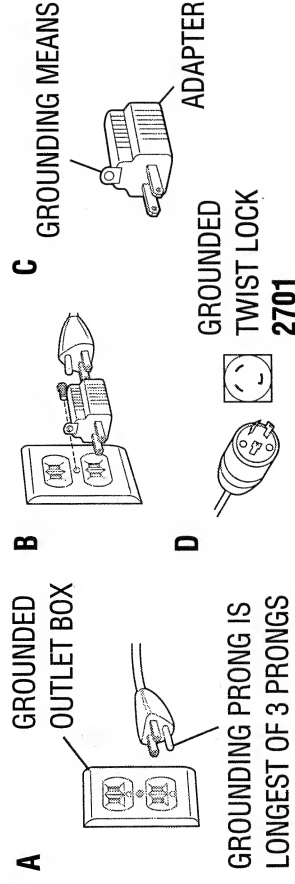

Safety Instructions For All Tools

- **KEEP WORK AREA CLEAN.** Cluttered areas and benches invite injuries.
- **CONSIDER WORK AREA ENVIRONMENT.** Don't expose power tools to rain. Don't use power tools in damp or wet locations. Keep work area well lit. Do not use tool in presence of flammable liquids or gases.
- **GUARD AGAINST ELECTRIC SHOCK.** Prevent body contact with grounded surfaces. For example; pipes, radiators, ranges, and refrigerator enclosures.
- **KEEP CHILDREN AWAY.** Do not let visitors contact tool or extension cord. All visitors should be kept away from work area.
- **STORE IDLE TOOLS.** When not in use, tools should be stored in dry, and high or locked-up place — out of reach of children.
- **DON'T FORCE TOOL.** It will do the job better and safer at the rate for which it was intended.
- **USE RIGHT TOOL.** Don't force small tool or attachment to do the job of a heavy-duty tool. Don't use tool for purpose not intended- for example- don't use circular saw for cutting tree limbs or logs.
- **DRESS PROPERLY.** Do not wear loose clothing or jewelry. They can be caught in moving parts. Rubber gloves and non-skid footwear are recommended when working outdoors. Wear protective hair covering to contain long hair.
- **USE SAFETY GLASSES.** Also use face or dust mask if cutting operation is dusty.
- **DON'T ABUSE CORD.** Never carry tool by cord or yank it to disconnect from receptacle. Keep cord from heat, oil, and sharp edges.
- **SECURE WORK.** Use clamps or a vise to hold work. It's safer than using your hand and it frees both hands to operate tool.
- **DON'T OVERREACH.** Keep proper footing and balance at all times.
- **MAINTAIN TOOLS WITH CARE.** Keep tools sharp and clean for better and safer performance. Follow instructions for lubricating and changing accessories. Inspect tool cords periodically and if damaged, have repaired by authorized service facility. Inspect extension cords periodically and replace if damaged. Keep handles dry, clean, and free from oil and grease.

- **DISCONNECT OR LOCK OFF TOOLS** when not in use, before servicing, and when changing accessories, such as blades, bits, cutters.
- **REMOVE ADJUSTING KEYS AND WRENCHES.** Form habit of checking to see that keys and adjusting wrenches are removed from tool before turning it on.
- **AVOID UNINTENTIONAL STARTING.** Don't carry tool with finger on switch. Be sure switch is off when plugging in.
- **EXTENSION CORDS.** Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. The following table shows the correct size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gage. The smaller the gage number, the heavier the cord.

Minimum Gage for Cord Sets			
Volts		Total Length of Cord in Feet	
120V	0-25	26-50	51-100 101-150
240V	0-50	51-100	101-200 201-300
Ampere Rating			
More Than	Not more Than	American Wire Gage	
0	6	18	16 14
6	10	18	16 14 12
10	12	16	16 14 12
12	16	14	12 Not Recommended

- **OUTDOOR USE EXTENSION CORDS.** When tool is used outdoors, use only extension cords intended for use outdoors and so marked.
- **STAY ALERT.** Watch what you are doing. Use common sense. Do not operate tool when you are tired.
- **CHECK DAMAGED PARTS.** Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is

damaged should be properly repaired or replaced by an authorized service center unless otherwise indicated elsewhere in this instruction manual. Have defective switches replaced by authorized service center. Do not use tool if switch does not turn it on and off.

SAFETY RULES FOR CIRCULAR SAWS

1. **DISCONNECT PLUG FROM POWER SUPPLY** before changing blades, making cutting depth or bevel adjustments, inspecting, cleaning or when saw is not being used.
2. **KEEP GUARDS IN PLACE AND IN WORKING ORDER.** Never wedge or tie lower guard open. Check operation of lower guard before each use. Do not use if lower guard does not close briskly and completely over saw blade.
CAUTION: If saw is dropped, lower guard may be bent, restricting full return. Do not use saw until the lower guard is returned to the proper working order.
3. **KEEP BLADES CLEAN AND SHARP.** Sharp blades minimize stalling, overload, kickback, and give a cleaner cut.
4. **DANGER:** Keep hands away from cutting area. Keep hands away from blades. Do not reach underneath work while blade is rotating. Do not attempt to remove cut material when blade is moving.
CAUTION: Blades continue to coast after trigger is released. Never place your hand on the work surface in front of or behind the saw.
5. **SUPPORT LARGE PANELS.** Large panels must be supported as shown in Figure 6 to minimize the risk of overload and kickback from blade pinching. When cutting operation requires the resting of the saw on the work piece, the saw should be rested on the larger portion and the smaller piece cut off.
6. **USE RIP FENCE.** Always use a fence or straight edge guide when ripping.
7. **GUARD AGAINST KICKBACK.** Kickback occurs when the saw begins to stall rapidly and is driven back towards the operator. Release the switch immediately if blade binds or saw stalls. Keep blades sharp. Don't force tool.

Stay alert. Exercise control. Don't remove saw from work during a cut while the blade is moving. A more detailed explanation of kickback follows in the "Operation" section of this manual.

8. **LOWER GUARD.** When necessary for accurate starts or when pocket cutting, raise lower guard with the retracting lever.
9. **ADJUSTMENTS.** Before cutting be sure depth and bevel adjustments are tight.
10. **USE ONLY CORRECT BLADES IN MOUNTING.** Do not use blades with incorrect size holes. Never use defective or incorrect blade washers or bolts.
11. **AVOID CUTTING NAILS.** Inspect for and remove all nails from lumber before cutting.
12. **CAUTION:** When sawing into walls, floors, or wherever "live" electrical wires may be encountered, **DO NOT TOUCH ANY METAL PARTS OF THE TOOL!** Hold the saw only by its plastic handles to prevent electric shock if you accidentally saw into a "live" wire.
13. **CAUTION:** Some wood contains preservatives such as copper chromium arsenate (CCA) which can be toxic. When cutting these materials extra care should be taken to avoid inhalation and minimize skin contact.

SAVE THESE INSTRUCTIONS FOR FUTURE USE

Motor

Your tool is powered by a B&D-built motor. Be sure your power supply agrees with nameplate marking. Volts 50/60 Hz means alternating current only. Volts DC-60 Hz means it will also operate on direct current. Lower voltage will cause loss of power and can result in overheating. All B&D tools are factory tested; if this tool does not operate, check the power supply.

ADJUSTMENTS AND SET UP


Attaching and Removing Blades

TURN OFF TOOL AND DISCONNECT FROM POWER SUPPLY.

To attach the blade:

1. Retract lower blade guard and place inner clamp washer and blade on saw spindle with printed side of blade out (teeth at bottom of blade pointing forward)(Figure 1).
2. Place outer clamp washer on saw spindle. The larger surfaces of both washers must face the blade.
3. Thread on blade clamping screw firmly by hand to hold both blade washers in position.
4. Depress lock pin and tighten blade screw (counterclockwise) with blade wrench.


Figure 1

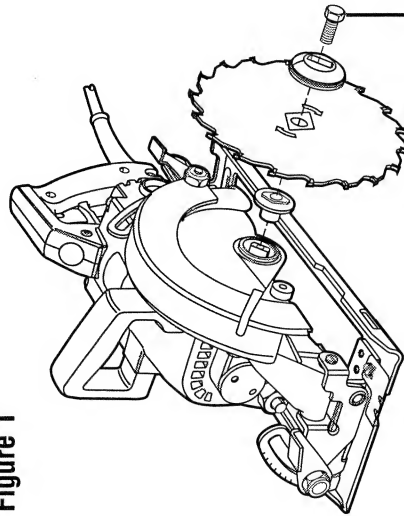

BLADE CLAMPING
SCREW

Figure 2

DEPRESS
LOCK PIN

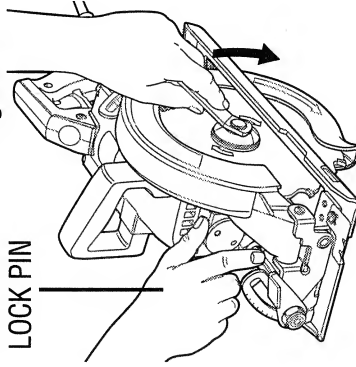

TURN CLOCKWISE TO
LOOSEN.

TURN COUNTERCLOCKWISE
TO TIGHTEN.

Changing Blades

TURN OFF TOOL AND DISCONNECT FROM POWER SUPPLY.

1. Depress lock pin (Figure 2), which runs through the center of the oil filler plug, and turn blade until the lock pin locks firmly into the saw shaft.
2. With blade wrench, loosen and remove the blade bolt by turning it in a clockwise direction when facing blade (left hand thread – Figure 2).
3. Retract lower blade guard and remove blade.


When mounting new blade, the teeth must point in the direction of the blade rotation. Replace and tighten the blade bolt as much as possible with the finger, then tighten firmly with the blade wrench. Your saw is equipped to accept blades with diamond arbor holes. An inner clamp washer with a round arbor may be purchased separately (Cat # 63243).

Blade Guide Adjustments

TURN OFF TOOL AND DISCONNECT FROM POWER SUPPLY.

Figure 3

1. With the saw bevel adjustment set on 90°, retract the blade guard and place a straight edge guard against the outside of the blade.
2. Hold the saw handles in normal operating position and align the 90° blade guide notch with the straight edge (Figure 3), then tighten the screw.
3. Take a scrap piece of wood and make a cut to see if the saw cuts where you want before doing any finish work.

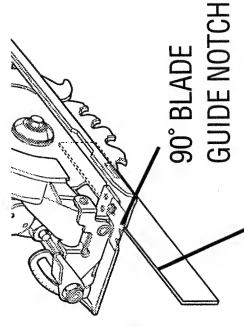

90° BLADE
GUIDE NOTCH

STRAIGHT EDGE

CUTTING DEPTH ADJUSTMENT

TURN OFF TOOL AND DISCONNECT FROM POWER SUPPLY.

1. Holding the saw firmly, raise depth adjustment locking lever at rear of saw (Figure 4) and move shoe to obtain the desired depth of cut.

2. Raise or lower shoe until blade extends desired distance below shoe.
3. Press depth adjustment locking lever down firmly, locking shoe in selected position.

For the most efficient cutting action, set the depth adjustment so that one tooth of the blade will project below the material to be cut. This distance is from the tip of the tooth to the bottom of the gullet in front of it. This keeps blade friction at a minimum, removes sawdust from the cut, results in cooler, faster sawing and reduces the chance of kickback.


NOTE: When using carbide-tipped blades, make an exception to the above rule and allow only one-half of a tooth to project below the material to be cut.

BEVEL ANGLE ADJUSTMENT TURN OFF TOOL AND DISCONNECT FROM POWER SUPPLY.

The full range of the bevel angle adjustment is from 0° to 45°. The quadrant is graduated in increments of 5°. On the front of the saw is a bevel angle adjustment mechanism (Figure 4) consisting of a calibrated quadrant and a lever. To set the saw for a bevel cut:

1. Lift bevel adjustment locking lever at front of shoe (Figure 4).
2. Swing shoe until pointer is in line with desired graduation mark on angle quadrant.
3. Press bevel adjustment locking lever down firmly to lock base in position.

Figure 4

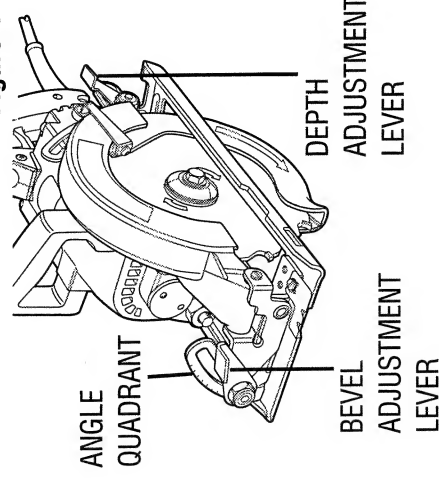

Switch

Pull the trigger switch to turn the motor ON. Releasing the trigger turns the motor OFF. This tool has no provision to lock the switch in the ON position, and should never be locked ON by any other means.

Work Piece Support

Figure 5 shows proper sawing position. Note that hands are kept away from cutting area, and power cord is positioned clear of the cutting area so that it will not get caught or hung up on the work. To avoid kickback, DO support board or panel NEAR the cut (Figure 6). DON'T support board or panel away from the cut (Figure 7). When operating the saw, keep the cord away from the cutting area and prevent it from becoming hung up on the work piece.

WARNING: It is important to support the work properly and to hold the saw firmly to prevent loss of control which could cause personal injury. Figure 5 illustrates typical hand support of the saw.

ALWAYS TURN OFF TOOL AND DISCONNECT BEFORE MAKING ANY ADJUSTMENTS!

Place the work with its "good" side – the one on which appearance is most important – down. The saw cuts upward, so any splintering will be on the work face that is up when you saw it.

Cutting

Support the work so that the cut will be on your left. Place the wider portion of the saw shoe on that part of the work piece which is solidly supported, not on the section that will fall off when the cut is made. As examples, Figure 5 illustrates the RIGHT way to cut off the end of a board, and Figure 8 the WRONG way. Always clamp work. Don't try to hold short pieces by hand! Remember

to support cantilevered and overhanging material. Use caution when sawing material from below. Be sure saw is up to full speed before blade contacts material to be cut. Starting saw with blade against material to be cut or pushed forward into kerf can result in kickback.

Push the saw forward at a speed which allows the blade to cut without laboring. Hardness and toughness can vary even in the same piece of material, and knotty or damp sections can put a heavy load on the saw. When this happens, push the saw more slowly, but hard enough to keep it working without much decrease in speed.

Should your cut begin to go off the line, don't try to force it back on. Release the switch and allow blade to come to a complete stop. Then you can withdraw the saw, sight anew, and start a new cut slightly inside the wrong one. In any event, withdraw the saw if you must shift the cut. Forcing a correction inside the cut can stall the saw and lead to kickback.

SUPPORT WORK NEAR CUT

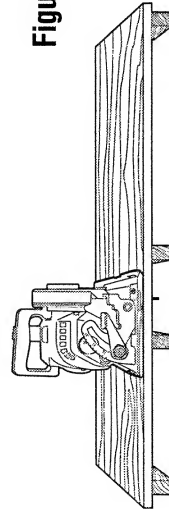


Figure 6

DON'T SUPPORT BOARD OR PANEL AWAY FROM THE CUT.

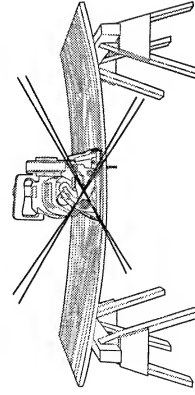


Figure 7

IF SAW STALLS, RELEASE THE TRIGGER AND BACK THE SAW UNTIL IT IS LOOSE. BE SURE BLADE IS STRAIGHT IN THE CUT AND CLEAR OF THE CUTTING EDGE BEFORE RESTARTING.

As you finish a cut, release the trigger and allow the blade to stop before lifting the saw from the work. As you lift the saw, the spring-tensioned telescoping guard will automatically close under the blade. Remember the blade is exposed until this occurs, never reach under the work for any reason whatsoever. When you have to retract the telescoping guard manually (as is necessary for starting pocket cuts) always use the retracting lever.

NOTE: When cutting thin strips, be careful to ensure that small cutoff pieces don't hang up on inside of lower guard.

CROSS CUTTING


Saws are used mostly to cut board to desired lengths- crossgrain cutting. Guide the machine by gripping the top handle with the left hand and sighting along the line thru the blade guide as shown in Figure 9. Move the saw just fast enough to keep the blade cutting. Do not force it and do not twist it sideways. When the blade has completed the cut, release the trigger switch.

RIPPING

Ripping is the process of cutting wide boards into narrower strips- cutting the grain lengthwise. Hand guiding is a little more difficult for this type of sawing and some type of guide should be used.

A **rip fence** (Figure 10) may be purchased separately for this purpose (Cat# 60551). Insert the rip fence in the slot at the front (either side) of the base and under the clamp screw bracket. Set for desired width of cut by first measuring width on material to be cut then adjusting the rip fence to that width. Before proceeding with the cut, be sure to tighten the clamp screw.

Figure 8

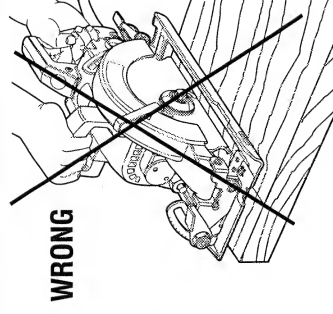

WRONG

Figure 9


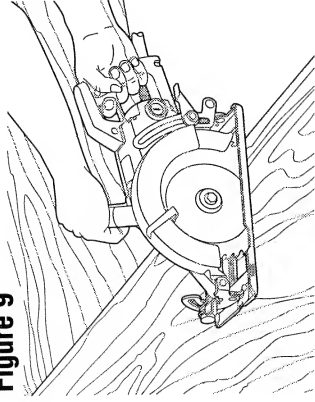


Figure 10

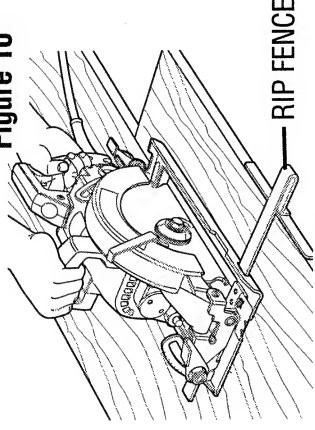


POCKET CUTTING

A pocket cut is one that is made in a floor, wall or other flat surface. Adjust saw shoe so blade cuts at desired depth. Tilt saw forward and rest front of the shoe on material to be cut. Using the retracting lever, retract blade guard to an upward position. Lower rear of shoe until blade teeth almost touch cutting line. Now release the blade guard (its contact with the work will keep it in position to open freely as you start the cut) Figure 11.

Start the motor and gradually lower the saw until its shoe rests flat on the material to be cut. Advance saw along the cutting line until cut is completed. Release trigger and allow blade to stop completely before withdrawing the blade from the material. When starting each new cut, repeat as above. Never tie the blade guard in a raised position.

Figure 11

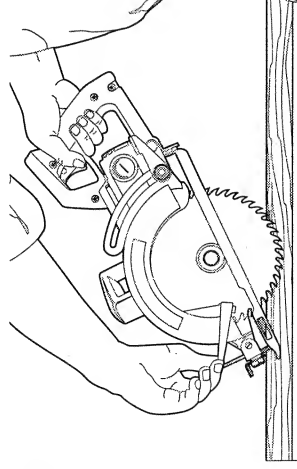

Kickback

When the saw blade becomes pinched or twisted in the cut kickback can occur. The saw is thrust rapidly back toward the operator. When the blade is pinched or bound tightly by the kerf closing down, the blade stalls and the motor reaction drives the unit backward. When the blade becomes twisted or misaligned in the cut, the teeth at the back edge of the blade can dig into the top surface of the wood causing the blade to climb out of the kerf and jump back toward the operator. Kickback is more likely to occur when any of the following conditions exist.

Improper work piece support

Sagging or improper lifting of the cutoff piece causing pinching of the blade. Cutting through material supported at the outer ends only (Figure 6). As the material weakens it sags, closing down the kerf and pinching the blade.

Cutting of a cantilevered or overhanging piece of material from the bottom up in a vertical direction. The falling cut off piece can pinch the blade.

Cutting off long narrow strips (as in ripping). The cutoff strip can sag or twist closing the kerf and pinching the blade.

Snagging the lower guard on a surface below the material being cut momentarily reducing operator control. The saw can lift partially out of the cut increasing the chance of blade twist.

Improper depth of cut setting on saw

Using the saw with an excessive depth of cut setting increases loading on the unit and susceptibility to twisting of the blade in the kerf. It also increases the surface area of the blade available for pinching under conditions of kerf close down.

Blade twisting (misalignment in cut)

Pushing harder to cut through a knot, a nail, or hard grain area can cause blade to twist.

Trying to turn the saw in the cut (trying to get back on the marked line) can cause blade twist.

Extended reach or operating saw with poor body control (out of balance) can result in twisting the blade.

Changing grip or body position while cutting can result in blade twist.

Backing unit up to clear blade can lead to twist if not done carefully.

Materials that require extra attention

Wet lumber, green lumber (material freshly cut or not kiln dried), pressure treated lumber (material treated with preservatives or anti-rot chemicals)

Use of dull or dirty blades

Dull blades cause increased loading of the saw. To compensate, an operator will usually push harder which further loads the unit and promotes twisting of the blade in the kerf. Worn blades may also have insufficient body clearance which increases the chance of binding and increased loading.

Lifting the saw when making bevel cuts

Bevel cuts require special operator attention to proper cutting techniques – especially guidance of the saw. Both blade angle to the shoe and greater blade surface in the material increase the chance for binding and misalignment (twist) to occur.

Restarting a cut with the blade teeth jammed against the material.


The saw should be brought up to full operating speed before starting a cut or restarting a cut after the unit has been stopped with the blade in the kerf. Failure to do so can cause stalling and kickback.

Any other conditions which could result in pinching, binding, twisting, or misalignment of the blade could cause kickback. Refer to the sections on “Adjustments and Set-Up” and “Operation” for procedures and techniques that will minimize the occurrence of kickback.

TOOL LUBRICATION

NOTE: With a new saw, change the oil after the first 10 hours of use and once per year after that. This action will greatly extend the life of your unit.

Figure 12

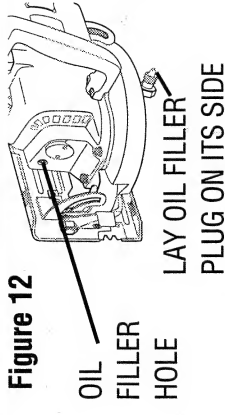

1. Always check oil level before using the saw. To check the oil level, lay the saw down on the blade side, shown in Figure 12 and remove the oil filler plug.

2. Lay the plug on its side under the top edge of the blade guard as shown. This procedure ensures that the saw is level so that the oil can be checked accurately. If the saw is adequately lubricated, oil will be visible at lower edge of the oil filler hole within 25 seconds. If oil does not appear in this time, the saw requires lubrication.

3. To lubricate the saw, stand it on its handle end. Add lubricant to the oil filler hole, checking frequently as described above to determine when the proper level is reached. If you accidentally overfill the saw, lay it on its side and permit the excess to leak out until the proper level is obtained. **DO NOT OVERFILL SAW!** Pressure generated by the gears in an overfilled saw will force lubricant through the seals causing eventual gear failure and possible motor damage.

Brushes

TURN OFF TOOL AND DISCONNECT FROM POWER SUPPLY.

Inspect carbon brushes regularly by unplugging tool, removing the brush inspection cap and withdrawing the brush assembly. Keep brushes clean and sliding freely in their guides. Always replace a used brush in the same orientation in the holder as it was prior to removal. Carbon brushes have varying symbols stamped into their sides, and if the brush is worn down to the line closest to the spring, they must be replaced. New brush assemblies

are available at B&D service centers. The tool should be allowed to "run in" (run at no load without a blade) for 10 minutes before use to seat new brushes. While "running in" DO NOT TIE, TAPE, OR OTHERWISE LOCK THE TRIGGER SWITCH ON. HOLD SWITCH BY HAND ONLY.

Blades

A dull blade will cause slow, inefficient cutting overload on the saw motor, excessive splintering, and could increase the possibility of kickback. It is a good practice to keep extra blades on hand so that sharp blades are available while the dull ones are being sharpened. (See "Saws-Sharpening" in the yellow pages.) In fact, many lower priced blades can be replaced with new ones at very little cost over the sharpening price. Hardened gum on the blade will slow down the cutting. This gum can best be removed with kerosene, turpentine, or oven cleaner. B&D manufactures a complete line of saw blades and the following types of blades are available from your dealer.

Combination Blade- For general-purpose ripping and cutting.

Chisel Tooth Combination- Specially designed for general-purpose ripping and crosscutting.

Framing/Rip Combination- For facing, roofing, siding, sub-flooring, framing, form cutting.

Cross Cut Blade- For smoother, faster cross cutting.

Ripping Blade- Fast for rip cuts.

Plywood Blade- For smooth cuts in plywood. Reduce splintering.

Planer Blade- For very smooth ripping and cross cutting.

Flooring Blade- For sawing where nails may be occasionally encountered.

Metal Cutting Blade- For cutting aluminum, copper and other soft metals.

Friction Blade- For cutting corrugated, galvanized sheets.

Carbide Tipped Blade- For longest sawing without blade sharpening. Cuts wood, transite, cement board, asbestos, formica, masonite, and similar materials.

Recommended accessories for use with your tool are available at extra cost from your distributor or your local service center. A complete listing of service centers is included with your tool.

Kit Box: 7-1/4", and 8-1/4" saws- (Cat # 62864)

Lubricant: This special lubricant has been developed to add longer life to worm drive saw gears. See lubrication instructions. (6 oz tube- Cat# 60086)

Rip Fence - (Cat# 60551)

Inner Clamp Washer is used on all worm drive saws when using metal or abrasive blades with round arbor holes. (Cat# 63243)

Inner Clamp Washer is used on all worm drive saws when using metal or abrasive blades with diamond arbor holes. (Cat# 143783)

Outer Clamp Washer is used on all worm drive saws on the outer side off all metal or abrasive blades. (Cat# 70457-00)

WATER FEED ATTACHMENTS ARE NOT RECOMMENDED FOR WORM DRIVE SAWS.

CAUTION: The use of any non-recommended accessory may be hazardous. If you need any assistance in locating any accessory, call 1-800-9-BD TOOL (1-800-923-8665) or contact Black & Decker, Consumer Services Department, 626 Hanover Pike, P.O. Box 618, Hampstead, MD 21074.

IMPORTANT!

To assure product SAFETY and RELIABILITY, particularly for double insulated tools, repairs, maintenance and adjustment (excluding maintenance described in this manual) should be performed by B&D service centers or authorized service centers, using identical B&D replacement parts.

Every B&D tool is of the highest quality.

If you wish to contact us regarding this product, please call toll free between 8:00am and 8:00pm ET, seven days a week:

1-800-9-BD TOOL

(1-800-923-8665)

One Year Free Maintenance

All B&D tools for Industry and Construction are covered under a one year free maintenance program where B&D will inspect your tool for safety and provide necessary maintenance or repairs, including normal wear and tear parts, for one year, FREE OF CHARGE.

Full Warranty

All B&D tools for Industry and Construction are warranted to be free of any defects in materials or workmanship. Upon thorough examination of tool, B&D will repair or replace, at our option, any product that is determined to be defective.

Conditions

The service/safety check and the warranty do not apply to: repairs made or attempted by anyone other than an authorized B&D service location; misuse, abuse, neglect, improper application of the tool; missing parts; or normal wear and tear (after first year of ownership). Please return the complete unit, transportation prepaid, to any B&D factory owned or B&D authorized service center location (list provided with tool or see yellow pages under "Tools Electric").

YOUR POWER TOOLS MAY BE SERVICED AT THE FOLLOWING B&D SERVICE CENTERS.

ALABAMA:	Birmingham 35209, 2412 Green Springs Hwy.	205-942-0538
	Mobile 36608, 3831 Airport Blvd.	205-343-6624
ALASKA:		
ARIZONA:	Anchorage 99518, 910 West International Airport Rd.	907-563-4664
ARIZONA:	Mesa 85202, 535 S. Dobson, Suite 7.	602-461-1074
	Phoenix 85013, 4501 N. 7th Avenue	602-279-6414
ARKANSAS:	Tucson 85712, 4845 E. Speedway Blvd.	602-323-3388
CALIFORNIA:	Little Rock 72201, 519 W. Seventh St.	501-372-3040
CALIFORNIA:	Anaheim 92806, 540 South State College Blvd.	714-772-4050
	Chula Vista 91910, 309 Broadway	619-420-6350
CALIFORNIA:	Concord 94520, 1500 Monument Blvd., #C2	510-682-4880
	Fresno 93710, 5412 North Blackstone Ave.	209-435-0810
CALIFORNIA:	Long Beach 90805, 2011 South St.	310-422-5825
	Los Angeles 90040, 4820 South Eastern Ave., Suite "L"	213-720-1834
CALIFORNIA:	Riverside 92506, 6215 Magnolia Ave., Suite "B"	909-787-9700
	Sacramento 95825, 2033 Fulton Ave.	916-972-9090
CALIFORNIA:	San Diego 92123, 9270 Clairemont Mesa Blvd.	619-279-2011
	San Jose 95128, 1185 So. Bascom Ave.	408-293-7350
CALIFORNIA:	San Leandro 94578, 15206 E. 14th St.	510-276-1610
	Van Nuys 91411, 14920 Victory Blvd.	818-787-5531
COLORADO:	Denver 80219, 1171 S. Federal Blvd.	303-922-8325
CONNECTICUT:	Orange 06477, 481 Boston Post Rd.	203-795-3583
CONNECTICUT:	Wethersfield (Hartford) 06109, 662 Silas Dean Hwy.	203-563-5800
DISTRICT OF COLUMBIA:	Colmar Manor 20722, 4153 Bladensburg Rd.	301-779-3808
DISTRICT OF COLUMBIA:	Falls Church, VA 22046, 344 W. Broad St.	703-573-7313
FLORIDA:		
FLORIDA:	Ft. Lauderdale 33334, 799 E. Oakland Pk. Blvd.	305-566-5102
	Ft. Myers 33907, 5224 Bank Street	813-278-1188
FLORIDA:	Jacksonville 32205, 920 Cassat Ave.	904-781-2253
	Miami (North) 33168, 13345 N.W. Seventh Ave.	305-681-6658
FLORIDA:	Miami (South) 33156, 12233 So. Dixie Hwy.	305-232-9497
	Orlando 32803, 3807 E. Colonial Dr.	407-894-7011
FLORIDA:	St. Petersburg 33709, 5635 49th St., N.	813-525-0273
	Tampa 33609, 3432 W. Kennedy Blvd.	813-872-6317
FLORIDA:	West Palm Beach 33415, 310 South Military Trail	407-689-9247
GEORGIA:		
GEORGIA:	Atlanta (South) 30349, 5330 Old National Hwy.	404-762-8844
	Smyrna 30080, 2550 Cobb Pkwy.	404-956-0869
GEORGIA:	Stone Mountain (Atlanta) 30086, 5723 Memorial Dr.	404-292-4714
HAWAII:	Honolulu 96819, 330 Sand Island Access Road	808-847-7447
ILLINOIS:		
ILLINOIS:	Des Plaines (Chicago) 60018, 1277 South Elmhurst Rd.	708-364-5220
	Lincolnwood (Chicago) 60466, 6710 N. Crawford Ave.	708-673-0923
ILLINOIS:	Lisle (West Chicago) 60532, 2950 Ogden Ave., Unit H	708-717-1075
	Moline 61265, 4433 23rd Ave.	309-762-3000
ILLINOIS:	Oak Lawn (Chicago) 60453, 6343 W. 95th St.	708-423-7212
	Waukegan 60085, 39 S. Greenbay Rd.	708-249-4390
INDIANA:		
INDIANA:	Evansville 47710, 307 First Ave., Crescent Ctr.	812-425-4269
	Hammond 46323, 7103 Kennedy Ave.	219-845-5100
INDIANA:	Indianapolis 46224, 5999 Crawfordsville Rd.	317-243-8308

IOWA:	Des Moines 50310, 3427 Merle Hay Rd.	515-270-1340
KANSAS:	Wichita 67213, 155 S. West St.	316-943-1271
KENTUCKY:	Louisville 40213, 5211 Preston Hwy.	502-968-7100
LOUISIANA:	Baton Rouge 70815, 11859 Florida Blvd.	504-272-8111
LOUISIANA:	Harvey 70058, 2500 Lapalco Blvd.	504-366-8676
	Metairie (New Orleans) 70002, 3504 N. Causeway Blvd.	504-837-2550
LOUISIANA:	Shreveport 71108, 7710-7714 Jewella Rd.	318-698-1553
MARYLAND:	Baltimore (East) 21205, 4712 Erdman Ave.	410-485-5550
MARYLAND:	Baltimore (North) 21030, 29-31 Cranbrook Rd., Cockeysville	410-666-5966
	Baltimore (South) 21122, 8220 Ritchie Hwy., Pasadena	410-647-8456
MARYLAND:	Colmar Manor 20722, 4153 Bladensburg Rd.	301-779-3808
MASSACHUSETTS:	Brighton (Boston) 02135, 12 Market St.	617-782-6264
MASSACHUSETTS:	Seekonk 02771, 120 Highland Ave.	508-336-6510
MICHIGAN:	Grand Rapids 49512, 3040 28th St., S.E.	616-949-8331
MICHIGAN:	Lansing 48917, 3203 W. Saginaw Hwy	517-323-4181
	Warren 48093, 27035 Van Dyke Blvd.	313-756-6711
MICHIGAN:	Westland (Detroit) 48185, 8067 North Wayne Rd.	313-427-1520
MINNESOTA:	Bloomington (Minneapolis-St. Paul) 55420, 9517 Lyndale Ave., S.	612-884-9191
MISSOURI:	Kansas City 64111, 4324 Main St.	816-531-0629
MISSOURI:	St. Ann (North St. Louis) 63074, 3637 North Lindbergh Blvd.	314-319-4661
	St. Louis 63131, 12852 Manchester Rd.	314-821-8740
NEBRASKA:	Omaha 68127, 4225 S. 84th St.	402-592-5666
NEVADA:	Las Vegas 89104, 3411 East Charleston Blvd.	702-641-6555
NEW JERSEY:	Cherry Hill 08034, 1444 E. Marlton Pike/Rte. 70	609-429-2822
NEW JERSEY:	Little Falls 07424, 1169 U.S. Highway 46	201-256-9373
	Union (Scotch Plains) 07076, 2520 Route #22 East	908-233-5665
NEW MEXICO:	Albuquerque 87110, 5617 Menaul Blvd., N.E.	505-884-1002
NEW YORK:	Buffalo 14209, 881 W. Delavan Ave.	716-884-6220
NEW YORK:	Centereach L.I. 11720, 2061-63 Middle Country Rd.	516-737-4706
	Elmhurst (New York) 11373, 77-20 Queens Blvd.	718-335-1042
NEW YORK:	Latham (Albany) 12110, 836 Troy-Schenectady Rd.	518-785-1867
	Rochester 14623, 2969 W. Henrietta Rd.	716-424-1310
NEW YORK:	Syracuse 13214, 3485 Erie Blvd., East	315-446-3086
	Westbury L.I. (New York) 11590, 1061 Old Country Rd.	516-997-6140
NORTH CAROLINA:	Charlotte 28205, 3007 E. Independence Blvd.	704-374-1779
NORTH CAROLINA:	Greensboro 27407, 3716 High Point Rd.	910-852-1300
	Raleigh 27604, 2930 Capital Blvd.	919-879-0357
OHIO:	Cincinnati 45241, 2310 E. Sharon Rd.	513-772-3111
OHIO:	Columbus 43227, 3975 E. Livingston Ave.	614-237-0461
	Dayton 45409, 2898 S. Dixie Dr.	513-298-1951
OHIO:	Mayfield Heights (East Cleveland) 44124, 5881 Mayfield Rd.	216-449-2770

OHIO (CONT'D):	Parma Heights (Cleveland) 44130, 6483 Pearl Road.	216-842-9100
OHIO (CONT'D):	Toledo 43607, 3231 Dorr St.	419-531-8921
OKLAHOMA:		
OKLAHOMA:	Oklahoma City 73106, 1318 Linwood Blvd.	405-232-7515
	Tulsa 74145, 3120 S. Sheridan Rd.	918-622-5666
OREGON:	Portland 97209, 1640 N.W. Johnson St.	503-228-8631
PENNSYLVANIA:		
PENNSYLVANIA:	Evans City 16033, 20808 Rt. 19 North.	412-779-9600
	Harrisburg 17112, 6080 Allentown Blvd.	717-545-0651
PENNSYLVANIA:	Lancaster 17601, 118 Keller Ave.	717-393-5251
	Philadelphia 19103, 333 N. 20th St.	215-564-5520
PENNSYLVANIA:	Philadelphia (North) 19115, 9977-81 Bustleton Ave.	215-464-7771
	Pittsburgh 15232, 5437 Baum Blvd.	412-362-2700
PENNSYLVANIA:	Whitehall (Allentown) 18052, 2242 MacArthur Rd.	610-435-9544
	Wilkes-Barre 18702, 759 Kiddier Street	717-824-5704
PUERTO RICO:	Puerto Nuevo	809-783-3535
RHODE ISLAND:	See Seekonk, MA	
SOUTH CAROLINA:		
SOUTH CAROLINA:	Greenville 29607, 1557 Laurens Rd.	803-232-3038
	TENNESSEE:	
TENNESSEE:	Chattanooga 37421, 6231 Perimeter Drive, Space E	615-894-5957
	Knoxville 37917, 4118 N. Broadway	615-688-0921
TENNESSEE:	Memphis 38116, 1085 East Brooks Rd.	901-332-3444
	Nashville 37211, 4811 Nolensville Rd.	615-893-8277
TEXAS:		
TEXAS:	Amarillo 79106, 3008 West 6th Ave.	806-373-1531
	Austin 78757, 6549 Burnet Rd.	512-459-1133
TEXAS:	Dallas 75229, 2257 Royal Ln.	214-820-6655
	El Paso 79915, 6822 Gateway East	915-778-9769
TEXAS:	Fort Worth 76111, 721 North Beach St.	817-831-3828
	Garland 75043, 718 W. Centerville Rd.	214-686-9302
TEXAS:	Houston 77022, 536 E. Tidwell Rd.	713-692-7111
	Houston (S.W.) 77025, 9319 Stella Link Blvd.	713-664-3666
TEXAS:	San Antonio 78201, 500 Culebra Ave.	210-732-1221
	Webster 77598, 100 East Nasa Rd. One	713-338-4556
UTAH:	Salt Lake City 84115, 1541 S. Third West St.	801-486-5828
VIRGINIA:		
VIRGINIA:	Falls Church 22046, 344 W. Broad St.	703-533-7313
	Hampton 23666, 3416 W. Mercury Blvd.	804-826-9382
VIRGINIA:	Norfolk 23513, 7631 Sewells Point Rd.	804-480-3333
	Richmond 23222, 1424 Chamberlayne Ave.	804-649-9245
WASHINGTON:		
WASHINGTON:	Seattle 98108, 421 S. Michigan St.	206-763-2010
	Spokane 99208, N. 7011 Division St.	509-467-8190
WEST VIRGINIA:	Tacoma 98409, 2602 S. 38th St.	206-473-6040
WEST VIRGINIA:	Charleston 25312, 1638 Sixth Ave.	304-343-0289
WISCONSIN:	Milwaukee (Wauwatosa) 53226, 10424 West Bluemound Rd.	414-453-4240

ALBERTA

Edmonton T6E 6H6, 3845 99th St. 403-462-5005

BRITISH COLUMBIA

Vancouver V5M 3Y7, 1735 Boundary Rd. 604-291-9942

MANITOBA

Winnipeg R3H OK3, 934 St. James St. 204-783-7294

NOVA SCOTIA

Halifax B3K 2A4, 6100 Young Street. 902-453-5090

ONTARIO

Brockville K6V 5W6, 100 Central Ave. 613-342-6641
Kanata K2L 1V3, 462 Hazeldean Rd #11 613-831-2332
Glencairn Plaza

London N6E 3A9, 981 Wellington Rd #6. 519-649-2407
Markham L3P 3J3, 9275 Hwy 48 Unit 12/13 ... 905-472-6168
Mississauga L4X 1L3, 1480 Dundas St. E #7. . 905-277- 0011
North York M3J 3G5, 48 Kodiak Cres. 416-635-6740

QUEBEC

Brossard J4W 1M6, 5840 Boul Taschereau ... 514-462-4881
Montreal H1Y 1B4, 3061 Belanger. 514-722-1021

FOR ADDITIONAL SERVICE LOCATIONS

CALL: 1-800-9- BD T00L

Black & Decker (U.S.) Inc. • 701 East Joppa Road, Towson, Maryland 21286
Printed in U.S.A. (JUNE95-CD-2) Form No. 159183-01 Copyright © 1994, 1995